

Volkswagen Taigo - instructions



Volkswagen Taigo, 1,0 TSI, ym. 2024

Engine: 999cm³, 3 cylinder, turbo

Gearbox: manual 5 gears

Top power: 70kw (95hp) /6500rpm

Top torque: 175nm /4500rpm

Weight:: 1229 kg

Fuel consumption:: 5,4 l/100km

WLTP CO2 Emissions: WLTP CO2 122g/km




WIDTH 4266 mm

LENGHT 4266 mm

HEIGHT 1518 mm

CAR CONTROLLERS

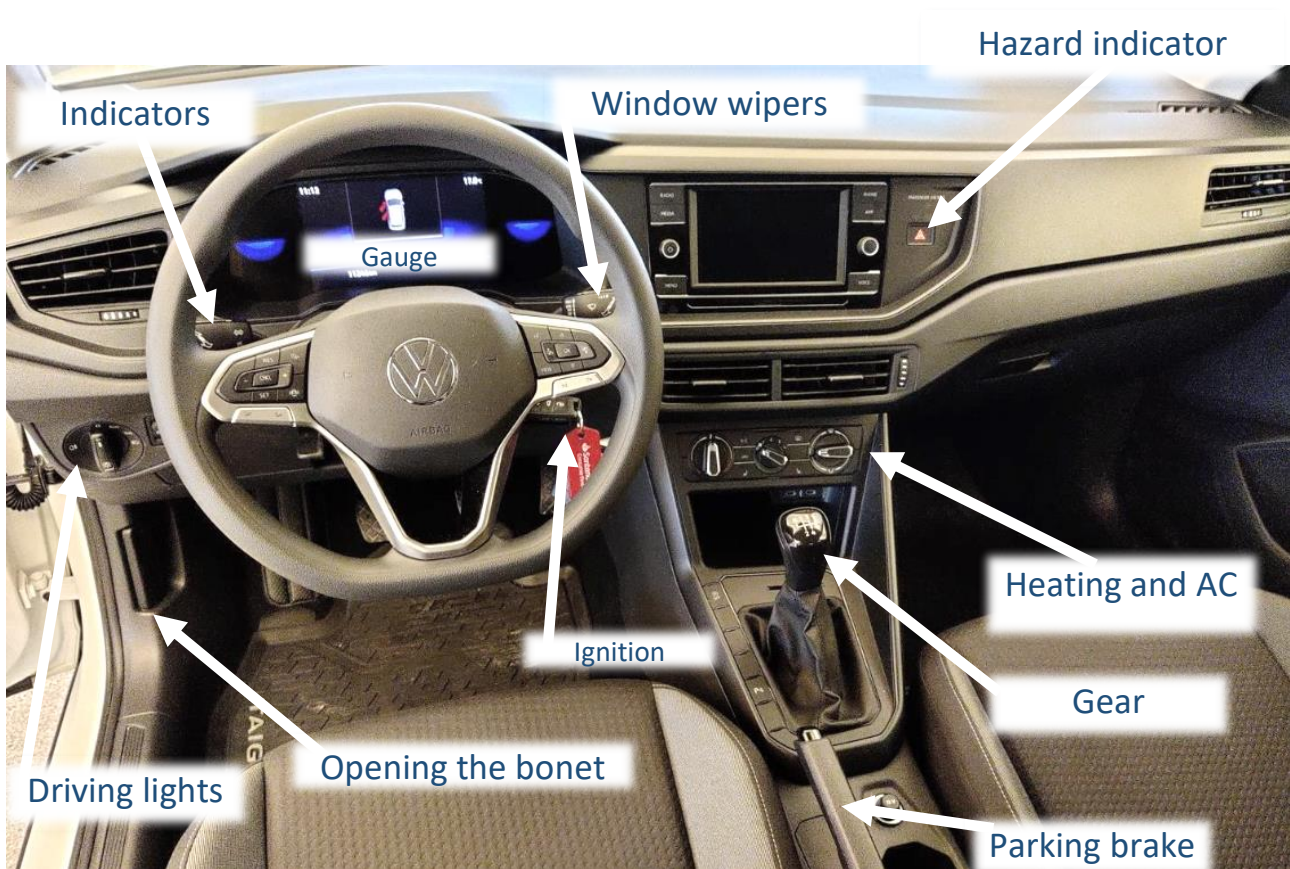

GEARS

Volkswagen Taigo has five gears. Depress the clutch pedal all the way down before touching the gear lever. Always start off in first gear. Before shifting into reverse (R), shift the gear into neutral and release the clutch up. Then depress the clutch again and shift into reverse (R) by pushing the gear lever down to select reverse.



SEAT ADJUSTMENT

First adjust the seat height so that your gaze is halfway up the windshield. By lifting the lever (A) from the front edge upwards, the seat moves up, and by pressing it downwards, the seat moves down. When you adjust the seat height, the distance also changes slightly. Next, adjust the seat distance. Lift the lever (B) upwards to unlock the adjustment and then move the seat to the appropriate distance. You can adjust the backrest angle by turning the roller (C) on the edge of the seat (not visible in the picture). You can adjust the headrest by turning the roller (D) on the back of the headrest. You can adjust the seatbelt by pulling the lever (E) on the side of the seat.



Press the button to move

MIRRORS

The adjustment knob for the side mirrors is located on the front edge of the driver's door. Behind the mirror switch are the power window buttons.

First, select the mirror you want to adjust: L = left
O = off R = right

Next, you can move the mirror in four directions using the adjustment knob.



Also you can find position to heat side mirrors


CAR GAUGES

You will see the speed in the middle of the instrument cluster, with the tachometer around it. A is the engine temperature and B is the fuel level. The remaining distance is shown at the bottom of the instrument cluster. Remember to fasten your seat belt.



HEATING AND AC

The temperature control is manual. You can adjust the interior temperature (C) to suit your needs by turning it. Red represents the warm side and blue represents the cold side. It is a good idea to keep the fan (D) on at all times when driving to prevent the windows from fogging up. You can choose to direct the air (E) downwards to the footwell, towards the centre air vents or upwards to the windscreen.

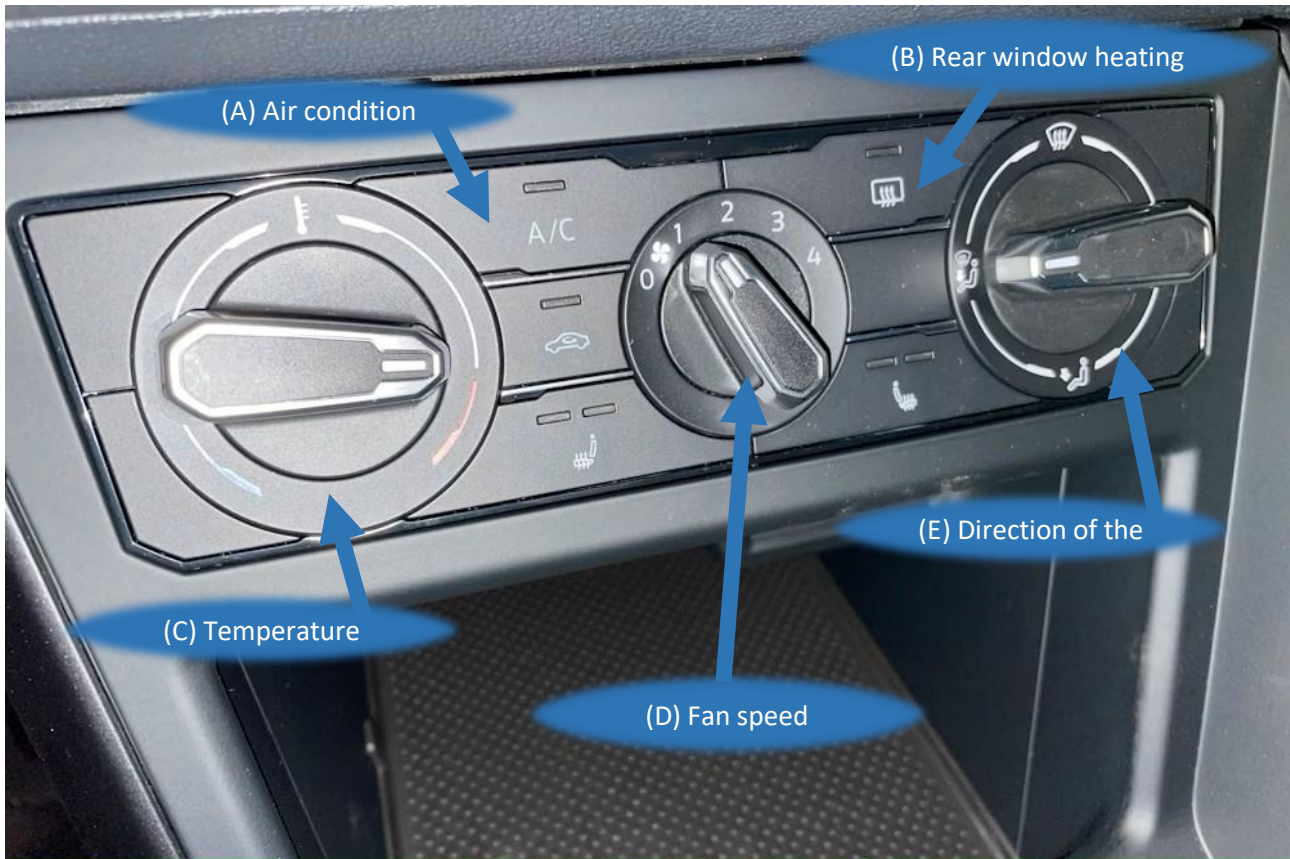

When you switch on the air conditioning by pressing the button (A), the car is supplied with air that is cooler than the outside air. By adjusting the temperature, you can still choose a comfortable temperature. The air conditioning also dehumidifies the air inside the car, which is useful if the car windows are frosted on the inside. The rear window heater button (B) is located in the middle of the air distribution roller. By pressing the button, you can heat not only the rear window but also the side mirrors.

DRIVING LIGHTS

The light switch is on the left side of the steering wheel. When the headlights are on, the car's taillights are always on. If the headlight switch is in the Auto position, the DRL daytime running lights at the front of the car are on, but the taillights are dark. The height of the headlights is adjusted using the roller (A).





AUTOKOULU *Eco*